

User Manual

EW Series

Portable Weighing Scale

Cautions

- When LCD is blank, it means OVERLOAD (the measured weight is heavier than the max capacity). Please immediately remove the measured objects away from the platter.
- Do not keep the weight placed on the platter for a long period.
- Keep the scale away from the environment with high temperature 、 high humidity 、 heavy press 、 heavy bump.
- Make sure the scale is located in a flat and plane surface.

Dimensions

■ Indicator: 140mm x 92mm x 25mm (L x W x H) ■
Platform: 300mm x 300mm x 70mm (L x W x H)

Symbols on LCD

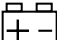
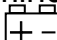
■ Zero Indication (▼):

▼ cursor appears on the right-bottom corner of LCD (above of **ZERO** printed on the display-overlay), and indicates the scale is at zero-point.

■ Net Weight Indication (▼) :

▼ cursor appears on the bottom edge of LCD (above of **NET** printed on the display-overlay), and indicates the tare weight has been deducted.

■ Battery Indication :

When LCD shows  , it means that the battery is running in low-voltage status. This is to remind the user to change the battery. LCD will show  continuously until the battery has been replaced.

■ Indication of kg or lb Weighing Mode (▼) :

▼ cursor will flash on the bottom edge of LCD (above of **kg** or **lb** printed on the display-overlay), and indicates the present weighing mode.

Operation Instructions ---

■ OFF key :

To power off the scale.

■ ON/UNIT key :

(1) To power on the scale.

(2) To select the weighing mode: **kg** or **lb**

■ **TARE/ZERO** key :

1. Pressing this key to zero the weight that is lighter than the division. LCD will show ▼ cursor on the above of **ZERO** (printed on the display-overlay).
2. While the measured weight is heavier than the division, pressing this key could get a net weight. Place a package or container on the platter and press this key to deduct the tare weight, LCD will show **0.00** and ▼ cursors on the above of **ZERO** and **NET** (printed on the display-overlay).

■ **NET/GROSS** key :

1. Put the container or package on the platter, and then press [**TARE/ZERO**] key. LCD will show **0.00** and ▼ cursors above of **ZERO** and **NET** (printed on the display-overlay). At this moment, pressing [**NET/GROSS**] key once could recall the deducted tare weight of container or package. Pressing [**NET/GROSS**] key once again, LCD will indicate **0.000** and ▼ cursors on the above of **ZERO** and **NET** (printed on the display-overlay).
2. Put the container or package on the platter and then press [**TARE/ZERO**] key. LCD will show **0.00** and ▼ cursors on the above of **ZERO** and **NET** (printed on the display-overlay). And then put the

measured subject into the container or package. LCD will indicate the **Net Weight Value**. At this moment, pressing [NET/GROSS] key once can obtain the total **Gross Weight Value**. Pressing [NET/GROSS] key again, LCD will go back to the **Net Weight Value** again.

Power Requirements

- AC: 100-240V, 60Hz
(For optional AC/DC Adaptor)
- DC: 9V ALKALINE BATTERY

We do more than you expect
